

CAPS PM_{SSA} Monitor

Accurate and Precise Continuous Monitoring of Particle Extinction, Scattering, Single Scattering Albedo and Absorption (by difference)




Attributes

- Particle extinction and SSA measured using the Cavity Attenuated Phase Shift (CAPS) technique
- Scattering derived from extinction and SSA measurement
- SSA and scattering channels require truncation correction as function of particle size (software provided)
- Absorption can be reported as difference of scattering and extinction channel
- Automated baseline function corrects for presence of absorbing gaseous species

Advantages

- Simultaneous measurement of extinction and scattering on same sample volume
- Measurement of optical extinction and scattering at the $< 1 \text{ Mm}^{-1}$ level with 1 s response time
- Automated and autonomous operation
- Choice of 5 wavelengths:

Far Blue	(405 nm)
Blue	(450 nm)
Green	(525 nm)
Red	(630 nm)
Far Red	(660 nm)

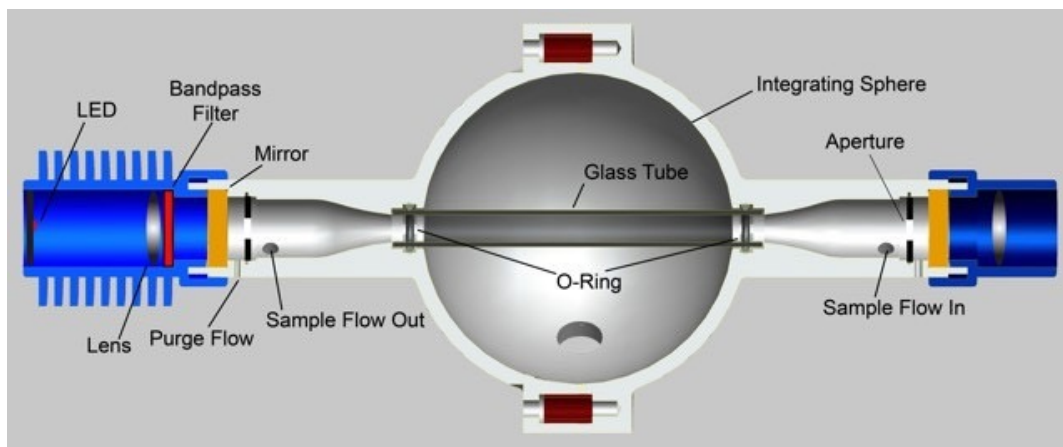

CAPS PM_{ssa} Monitor

Specifications

MEASUREMENT SPECIFICATIONS	Extinction	Scattering	SSA
Range	0-3,000 Mm ⁻¹		0-1
Resolution	0.01 Mm ⁻¹		0.01
Precision (2σ, 1 s) (2σ, 60 s)	1.5 Mm ⁻¹ 0.3 Mm ⁻¹		- 0.03
Time Response (10-90%)	1-2 s		
Baseline Drift	Baselines Taken as Often as Required		
Linearity	<± 10 Mm ⁻¹ at 1000 Mm ⁻¹		
Flow Rate (lpm)	0.85		

1 Year Manufacturer's Warranty

Physical Specifications

Cell Pressure: ambient
Cell Temperature: ~5 °C above ambient
Power Usage: < 40 W
Weight: 14 kg
Size: ~65 cm x 43 cm x 23 cm (L x W x H)
[19" rack mount, 5U, 24" deep]

Data Output

Display Front Panel, 1 second time constant(± 1 digit)
RS-232 Rear Panel, DB-9 Female Connector (Null Modem cable provided)
USB Rear Panel, Female B Connector (Male A to Male B cable provided)
Ethernet Rear Panel, RJ-45 port
On-Board Storage Capacity > 10 years continuous operation

REFERENCES

Humidified Single Scattering Albedometer (H-CAPS-PMSSA): Design, Data-Analysis, and Validation, C. M. Carrico, T.J. Capek, K.J. Gorkowski, J.T. Lam, S. Gulick, J. Karacaoglu, J. E. Lee, C. Dungan, A.C. Aiken, T.B. Onasch, A. Freedman, C. Mazzoleni & M.K. Dubey, *Aerosol Sci. Technol.*, 55:7, 749-768 (2021)

Laboratory Validation and Field Deployment of a Compact Single-Scattering Albedo (SSA) Monitor, J. Perim de Faria, U. Bundke, A. Freedman, T.B. Onasch, and A. Petzold, *Atmos. Meas. Tech.*, 14, 1635-1653 (2021)

Spatial and Temporal Variability of Carbonaceous Aerosol Absorption in the Po Valley, Gilardoni, S., Massoli, P., Marinoni, A., Mazzoleni, C., Freedman, A., Lonati, G., De Iuliis, S. and Gianelle, V., *Aerosol Air Qual. Res.* 20: 2624-2639 (2020)

Single Scattering Albedo Monitor for Airborne Particulates, T. Onasch, P. Massoli, P. Kebebian, F. Hills, F. Bacon and A. Freedman, *Aerosol Sci. Technol.*, 49, 267-279 (2015)

System and Method for Precision Phase Shift Measurement , P.L. Kebebian, U.S. Patent No. 8,364,430 (issued Jan. 29, 2013).

System and method for trace species detection using cavity attenuated phase shift spectroscopy with an incoherent light source, P.L. Kebebian and A. Freedman, U.S. Patent No. 7,301,639 (issued November 27, 2007).